

MICROWAVE


Siemens HF14153



QUICK START

1. Press ->> to warm up in 30-second intervals.
2. The microwave will heat at full power for up to 10 minutes.

BUTTONS

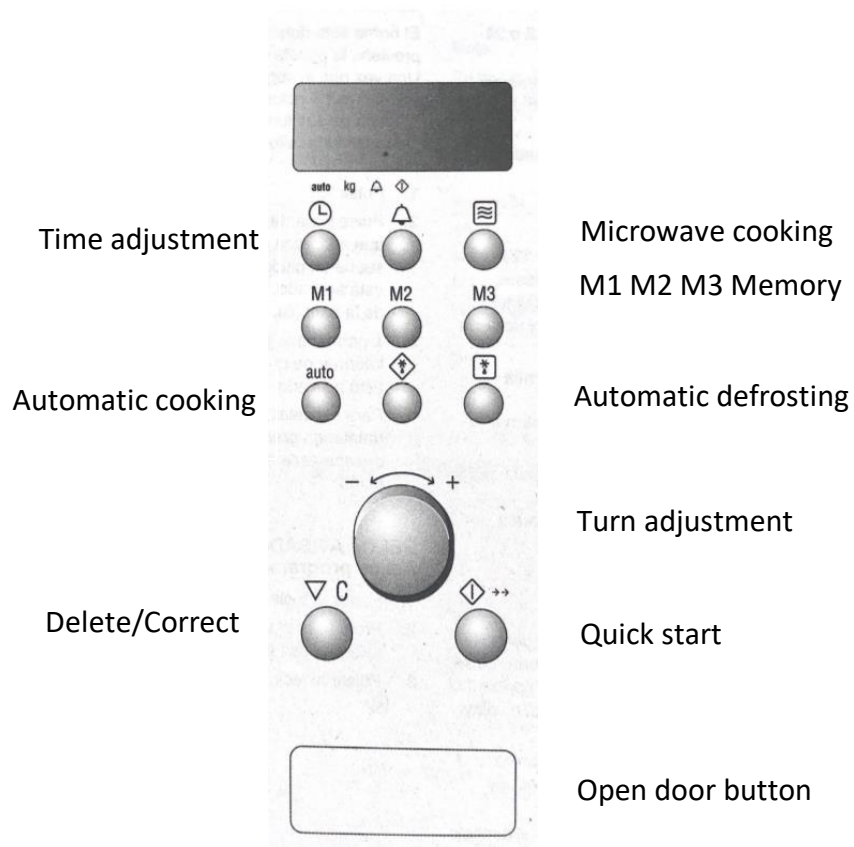

*Remember to cover the food for better cooking.

*Remember not to introduce metallic or aluminium objects. *