



## Manual combi oven (ENG)



### 1. Function selector

Use the function selector to set the type of heating or other functions. You can turn the function selector clockwise or anti-clockwise from the "Off" position.

Setting	Use
• "Off" position	The appliance is switched off.
Microwave	Selects microwave operation.
Hot air	The fan distributes the heat from the ring heating element in the back panel evenly around the cooking compartment.
Hot air grill	The fan circulates the hot air from the grill element around the food.
Pizza setting	The bottom heating element and the ring heating element in the back panel heat up.
Grill	The whole area below the grill element becomes hot.
Programmes	This gives you access to pre-programmed settings for many dishes.

### 2. Touch fields

There are sensors behind the touch fields. Simply touch a symbol to select the function.

Symbol	Meaning
Microwave	Select the microwave power levels or switch on the microwave function for a type of heating.
Programmes	Call up the programme selection, use the rotary selector to select the programme number.
Rapid preheating/childproof lock	Press briefly: Activate/deactivate rapid preheating. Press and hold: Activate/deactivate the childproof lock.
Time-setting options	Select the "Time-setting options" symbol and use the rotary selector to set the time-setting options you require.

p.t.o.



°C	Temperature	Select the "Temperature" symbol and use the rotary selector to set the temperature you require.
kg	Weight	Select the "Weight" symbol and use the rotary selector to set the weight you require.
▷/□	Start/stop	Starts or pauses the operation <b>Note:</b> Pressing and holding ends the current operation and the settings for the operating mode selected are reset to the default values.

### 3. Display

The display shows symbols for active functions and the time-setting options.

Symbol		Meaning
	Timer	If the symbol is highlighted, the timer will appear on the display.
	Cooking time	If the symbol is highlighted, the cooking time will appear on the display.
	Clock	If the symbol is highlighted, the clock will appear on the display.
h:min	Hours/minutes	Cooking time in hours and minutes
min:sec	Minutes/seconds	Cooking time in minutes and seconds
	Childproof lock	If this symbol lights up, the childproof lock is activated.
	Rapid heating	If this symbol lights up, rapid heating is activated.

### 4. Rotary selector

Use the rotary selector to set the temperature for the heating type or select the setting for other functions. You can turn the rotary selector clockwise and anti-clockwise.